

432 Moose Hill Road  
Monroe, Connecticut 06468  
203-459-4919  
lynn@lynnchalk.com  
www.lynnchalk.com

---


***Instructions for Installing Outside Mounted Roman Shades Above Window Frame with Clutch***  
Illustration shows roman shade with Standard Cordlock, but installation method is same with Continuous Cord Loop Clutch System.

For Outside Mounted Shades mounted above the window frame, I have included “L” brackets for mounting.


Line Up “L” Brackets on wall above window frame. Roman Shade board is about  $\frac{3}{4}$ ” high, so adjust height of “L” brackets to accommodate length of your roman shade so when it is fully extended it will be at the correct height.




For most windows 3 “L” brackets are sufficient. Make a note of where the roman shade hardware is installed on the board, and line up the “L” brackets so they don’t interfere with the hardware. Place one near the center and one on each side. Use Long screws included to drill into wall. If you do not hit wood behind the wall to give security to the bracket, you may need to install wall anchors.

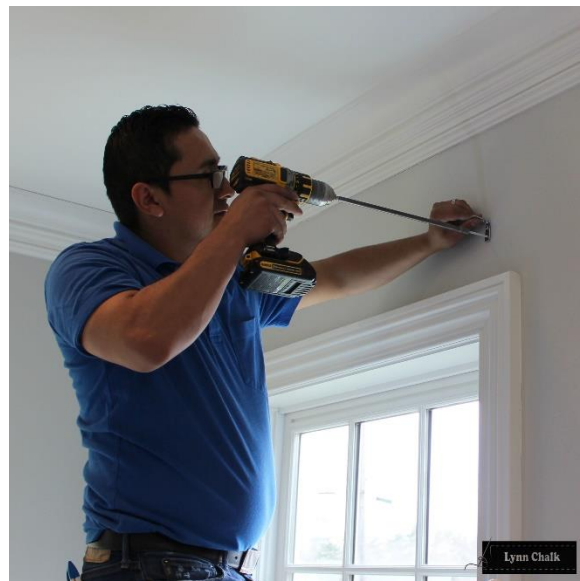

Place Roman Shade on top of Board, centering board over the top of the window frame.

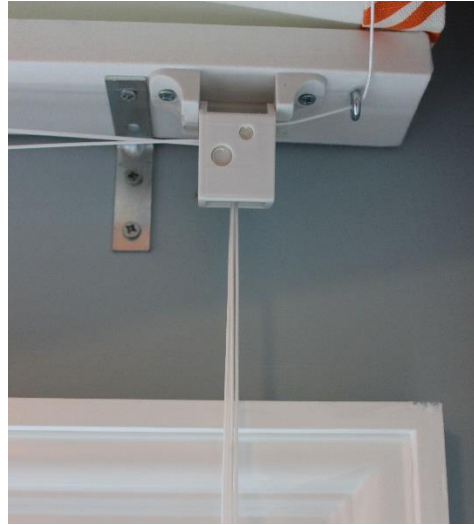

Using 3/4" screws included drill through top of "L" bracket into roman shade board to secure the board to the "L" Bracket.

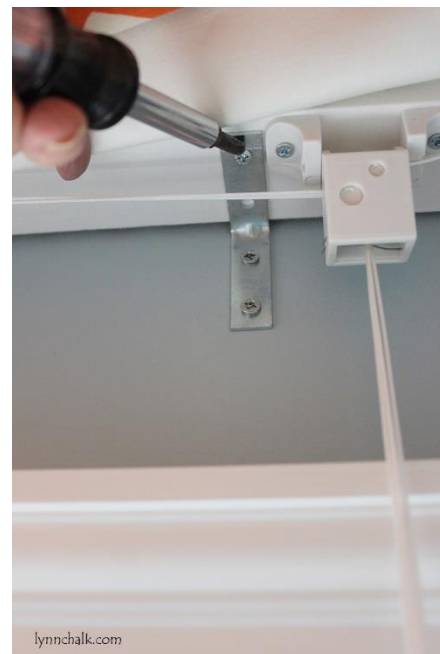

If your shade comes with a Continuous Cord Loop Clutch System, the shade is mounted the same way.

See additional instructions on how to mount the Tension Device which is optional, but secures the bead cord safely if you have small children.

